

# 3G Haenim Sterilizer Manual

## General description

- 1) Controller buttons
- 2) Time and Temperature indicators
- 3) Tempered glass
- 4) Handle of door

- 5) 304 SUS
- 6) Shelf
- 7) Basket

- 8) Ventilation

- 9) Warm air Exit




- 10) UV lamps

- 11) LED Bar

- 12) Filter

- 13) Vent Exit
- 14) Air intake

- 15) Inlet
- 16) Power cord

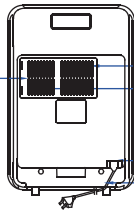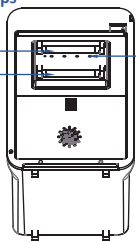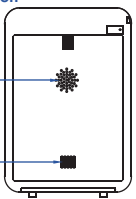


## Using method the buttons.


- There are 4 buttons and the indicators turn off before operation.
- Start the operation if you touch the buttons.

## AUTO button


There are the Auto mode1, mode2 and mode3 and has the dry and the UV functions.




**AUTO mode1** : Touch one time  
If you want to dry and the UV function in a short time.

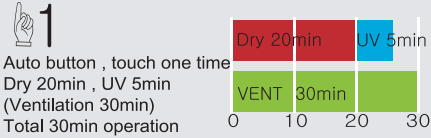


**Notice!**  
To improve the drying power,  
Before operation,  
shake 3~5times the cleaned  
bottle or other products.



**AUTO mode2** :Touch two times  
After operation Auto mode1, there are still the water.


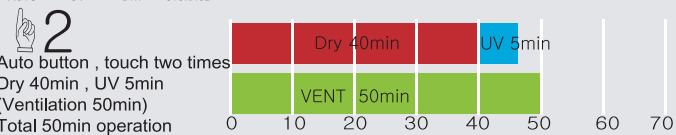


**AUTO mode3** :Touch three times  
After operation Auto mode2, there are still the water.

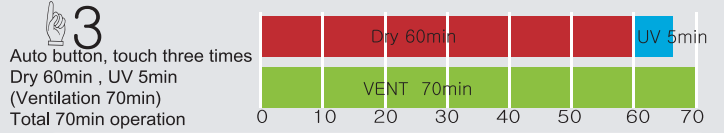

## UV button


There is only UV function and use when you don't need the dry function.

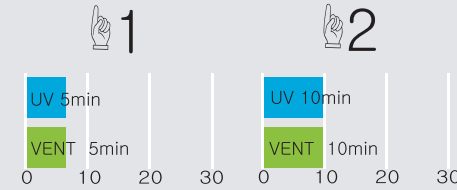


**Notice!**  
The UV lamp smell and the bottle change the color after operating the UV function. It is no problem and result of the sterilizing power.

## DRY button


There is only dry function and use when you don't need the UV function.




**DRY mode1** : Touch one time  
If you want to dry and the UV function in a short time.



**DRY mode2** : Touch two times  
After operation Dry mode1, there are still the water.




**DRY mode3** : Touch three times  
After operation Dry mode2, there are still the water.

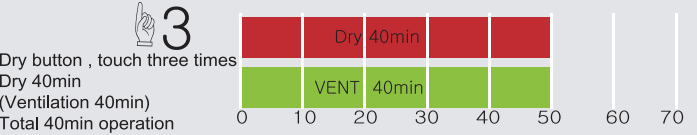

## Storage button

If you want to use the storage function, After touch the Auto or UV or Dry buttons and then also touch the Storage button. If the working of Auto or UV or Dry function is finish and after 2hours The storage function has started and cycle the same mode every 2hours for 4times.



**Waste products processing** - Do not make a bonfire the waste products of the plastic.

## Safety precautions

-Prohibition - In case of the damaged of products and cause a minor injury.

1. This product can use only the 120V 50Hz/60Hz.
2. Do not turn on and look the UV lamps by compulsion while open the door.
3. Do not disassemble or remodel.
4. Do not the animal, vinyl, benzene and the dangerous goods in the product.
5. Do not unplug by compulsion during an operation.
6. Install a product on the flat place.
7. Do not use the chlorinated disinfectant in the product and it is cause of corrosion.
8. Do not attach to the wall closely because there are the filters on the back.
9. Clean the filters once a month.
10. Do not put too many products.
11. Clean the inside stainless once a month.
12. It can be cause of corrosion if you don't clean the inside stainless well even if it is the 304 SUS.


**Warning** - In case of cause a serious injury or death

1. Do unplug and call to A/S center if there are a smell of burning.
2. Do not touch the plug with wet hands.
3. Install the product out of children's reach.
4. Don not bend and pull the power cord by constraint.
5. Do unplug when clean with hands or it is thundering.
6. Clean the dirty power cord with dry cloth.
7. Do not install in the humid place like the bathhouse and the pool.
8. Stop the operation and the ventilate air if you suspect a gas leak.

## Checking for use

### Components

Shelf , Basket , Power cord

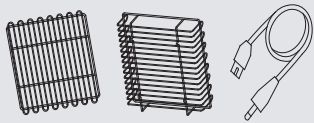


### Description

Model	HN-03
Size	295(W) x 375(D) x 415(H) mm
Rating	AC 220~240V 50 / 60Hz
Consumption	80Watt
Type	PTC Heater / UV lamp
Weight	5Kg(N.W)

### Using the shelf and the basket

Install the shelf at the top and the basket at the bottom.

put the bottle at upper direction and use as the attached picture.

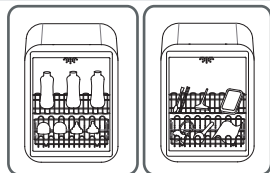

## Self-diagnosis & UV lamp replacement.

### Self-diagnosis

Before requesting A/S, Please check the problems first.

#### If UV lamp doesn't light,

Check a power cord is plugged into the outlet well.

Check a indicator of UV button turn on.

Check a UV lamp replacement time.

#### If LED lamp doesn't light,

Check a power cord is plugged into the outlet well.

Check a indicator of DRY button turn on.

#### If DRY function is not working well,

Check the indoor temperature.

(If the indoor temperature is too low, Drying power could be weak.)

3~5 times, shake the cleaned bottle or other products


Use the Auto mode3 if you want to dry many products.

### UV lamp replacement -Warning -

Unplug the power cord and then replace the UV lamps.

- UV lamp replacement method -

Turn the UV lamp to gab of the socket and replace new lamps as the picture.

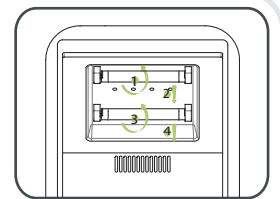

※Please exchange the UV lamp one a year.

### memo